

Thank you for purchasing
Bimmian.com Replacement Mirrors



- 1) Begin by prying the original mirror surface from the car by using a pry tool that will not break the mirror. It will take some force to release the mirror from its clips.
- 2) Once the mirror is released unplug heated mirror plug by release the connector tabs or by pulling away the plug leads from the mirror. Make sure you remember where the leads connect to on the new mirror.



- 3) In most cases the mirror mounting plate will come off with the mirror surface. If this occurs you will need to unclip the mounting plate. Use a small flathead screwdriver to pry it away by unclipping the 4 (or more) tabs found around the perimeter of the mounting plate.



4) After removing the mounting plate, reattach it to the inner mirror by aligning the clip and pushing in firmly.



5) Reconnect heated mirror plug, align mirror to mounting plate and push in firmly.
Be sure that the mirror has been correctly installed before driving.