

INSTALLATION INSTRUCTIONS FOR E90/E92 Interior Xenon Bulbs




To remove center (rear) dome light simply pull down on the forward edge of the console as shown at the picture at a 45 degree angle.



To remove front dome light you need to push 2 clips behind the reading lights with a screwdriver or other tool. These are located directly behind each map light.

Once either of these lights are out, you will find 3 bulb holders, twist and remove to replace the lights.

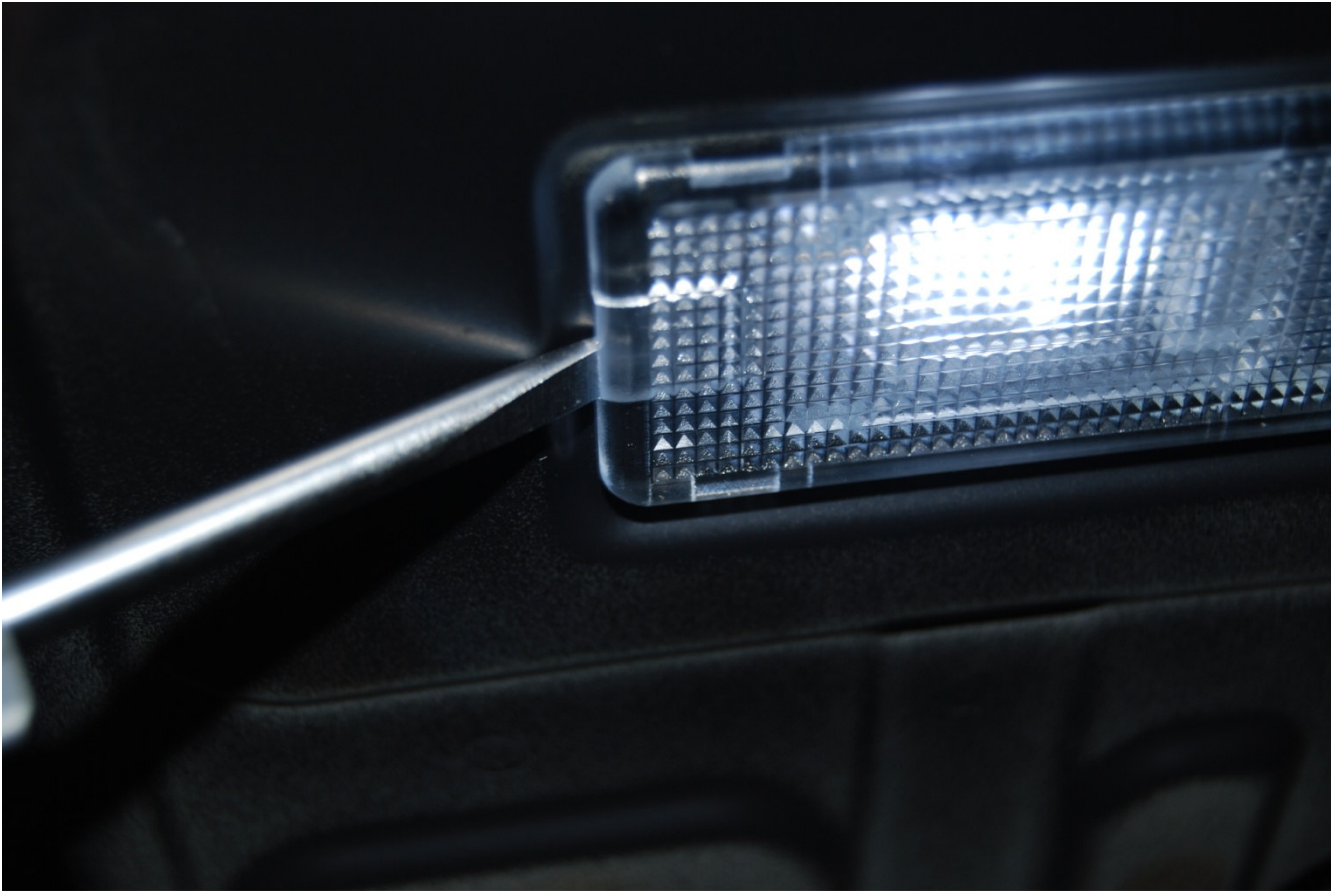

To remove the light inside the trunk/footwell/glove box/vanity lights just push the screwdriver into the notch on the side of the light to depress the clip and pull the light down. (Pull towards you on vanity light)



-To remove plate number light, first insert screwdriver in to the opening on the left and push all light to the right and outwards. It will move downwards a fraction of an inch and unlock. Release. Pull the LEFT side of the light downward and wiggle the light fixture out of the hole.

FOR E92 ONLY:
To replace rear footwell lights



Insert screwdriver or other flat tool and gently twist along the top side of the light to release all top clips, then tilt the light out and wiggle it loose. Disconnect wire. On the underside take a small pin or tool to depress 2 grey clips, and pull the grey and black plastic parts apart.