


SHIFTER KNOB INSTALLATION INSTRUCTIONS

TOOLS REQUIRED FOR INSTALLATION: Allen Key (provided)

- 1) Remove your original shifter knob by gipping it tightly and pulling up swiftly and with force. Be careful not to be in the path of the shifter knob when pulling up.



- 2) Slip on your replacement knob and tighten allen screws with allen key (provided), doing so equally along the perimeter of the knob shaft. Be sure to tighten these screws very tightly or they may become loose over time.

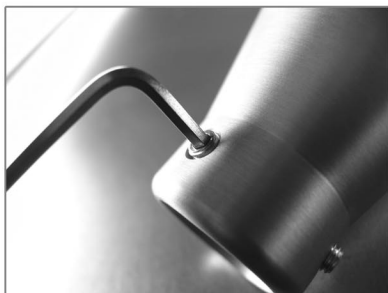

- 3) Remove backing on shifter gate sticker and align on shift knob. If your shift gate came with a buffer pad, remove backing and stick this pad in between the knob and the shift gate sticker. Once applied, press down with finger firmly to adhere gate to knob.

